




# SIDEWALK / CART PATH / HIKE & BIKE TRAILS

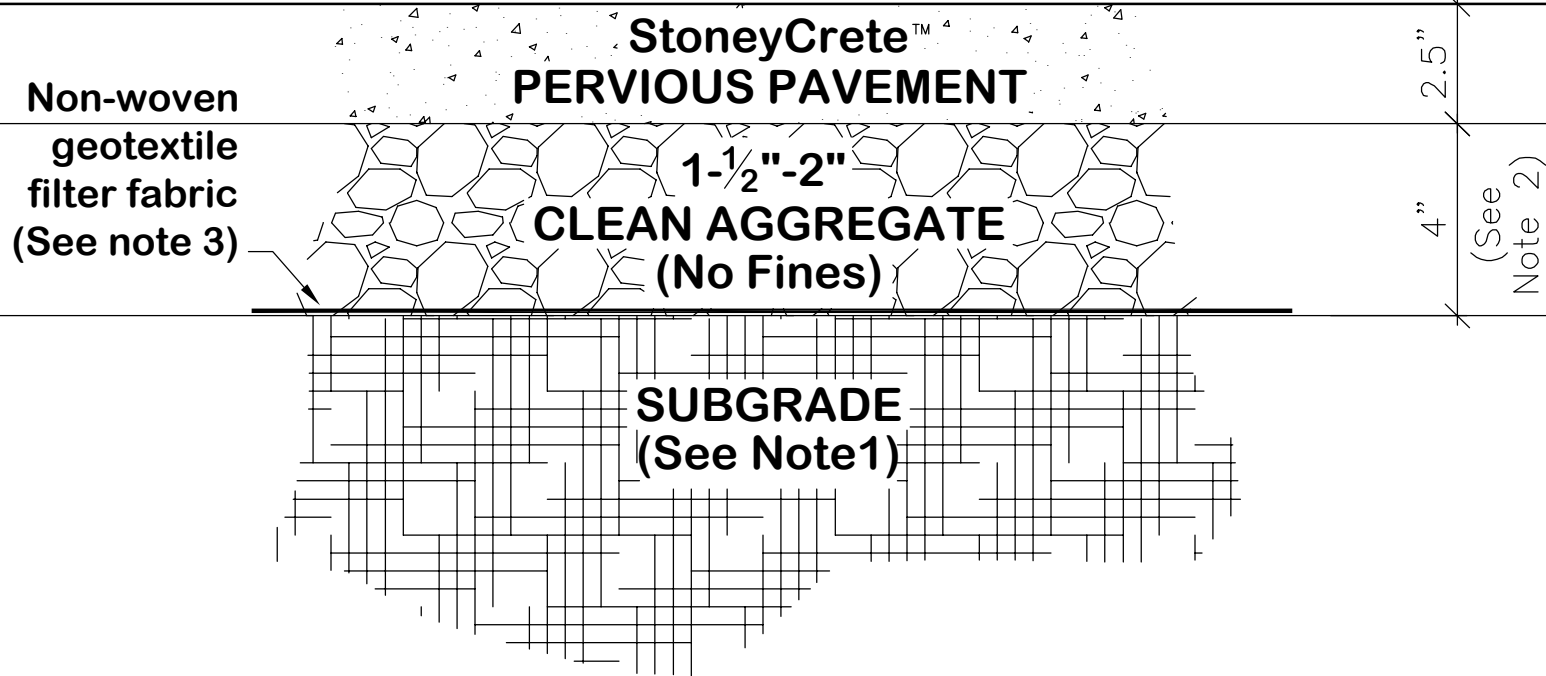

### NOTES:

1. Scarify organic material (2" min.), then roll to identify & eliminate any wet, soft or puddling areas.
2. Geo-tech engineering study must be completed to assure support & permeability of subsoil.
3. Use a non-woven polypropylene geotextile filter fabric. Fabric should be inert to biological degradation & chemical, alkali & acid resistant. (like Mirafi® 140NC)

## TYPICAL DESIGN SECTION

SCALE: 3"=1'-0"

**STONE CREEK MATERIALS, L.L.C.**

25 STONEY CREEK COVE  
AUSTIN, TEXAS 78734

PH: (512) 261-0821 FX: (512) 261-8709  
WWW.STONEYCREEKMATERIALS.COM

Date:

6/5/03

File:

Sht5.dwg

Sheet:

E5